

PARTS LIST

for

Reed Cylindrical Die Thread Rolling Machine

Model A-22

When ordering parts, always furnish the serial number of the machine as well as the symbol number and name of the part obtained from this book.

Reed
Machinery, Inc.

**10A New Bond St.
Worcester, MA 01606**

**Phone: 508-595-9090
Fax: 508-595-0002
sales@reed-machinery.com**

U.S.A.

Machine Parts List **A22-3**

LIST OF CONTENTS

MACHINE ASSEMBLY

Sectional Drawing
List of Parts

CAM LEVER ASSEMBLY

Photograph of Parts
List of Parts

PIVOT BLOCK ASSEMBLY

Photograph of Parts
List of Parts

ADJUSTABLE WORK STOP ASSEMBLY


Photograph of Parts
List of Parts

DOUBLE SUPPORT DIE HOLDER ASSEMBLY

Photograph of Parts
List of Parts

OVERHUNG DIE HOLDER ASSEMBLY


Photograph of Parts
List of Parts

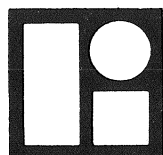 

Litton

REED

 Holden, Mass. 01520 U.S.A.

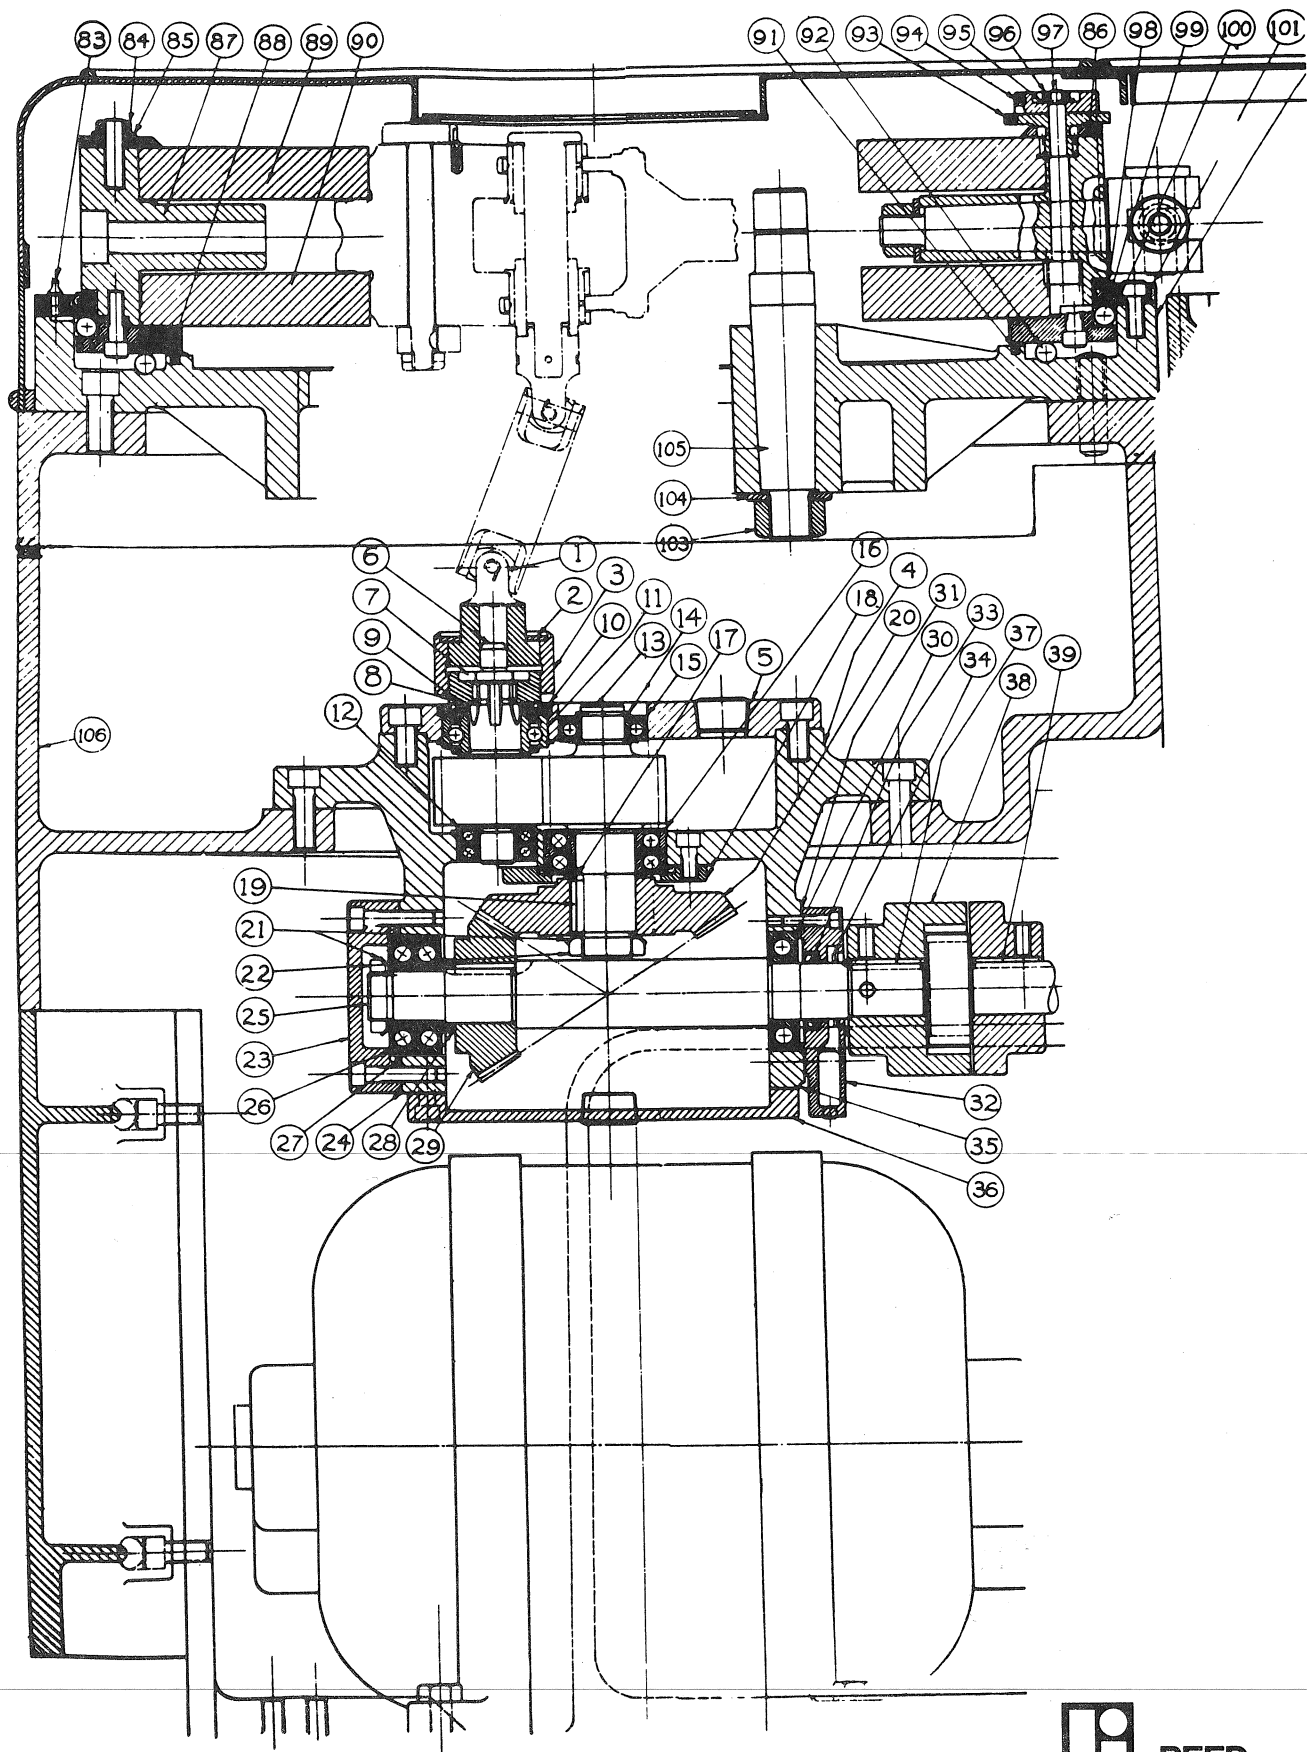

REED
Thread Rolling Tools


No. A22 MACHINE ASSEMBLY

IMPORTANT: Always furnish serial number of machine.

<u>Symbol</u> <u>No.</u>	<u>Name of Part</u>
1 - - - - -	Top Die Matching Gear
2 - - - - -	Ring Gear Cap
3 - - - - -	Die Matching Ring Gear
4 - - - - -	Die Drive Housing
5 - - - - -	Top Cover
6 - - - - -	Cluster Gear
7 - - - - -	Bottom Die Matching Gear Nut
8 - - - - -	Bottom Die Matching Gear
9 - - - - -	Cluster Gear Shaft Collar
10 - - - - -	Cluster Gear Shaft Oil Seal
11 - - - - -	Ball Bearing WC 488506X1C
12 - - - - -	Ball Bearing ND 45204X1A
13 - - - - -	Bevel Gear Shaft
14 - - - - -	Bevel Gear Shaft Snap Ring
15 - - - - -	Ball Bearing NDWC-88505X1C
16 - - - - -	Ball Bearing ND 45207X1A
17 - - - - -	Bevel Gear Shaft Collar
18 - - - - -	Bevel Gear Bearing Retainer
19 - - - - -	Key
20 - - - - -	Bevel Gear
21 - - - - -	Ball Bearing Lock Washer NDW 06
22 - - - - -	Ball Bearing Lock Nut NDN 06
23 - - - - -	Ball Bearing Cap
24 - - - - -	Ball Bearing Cap Gasket
25 - - - - -	Bevel Pinion Shaft
26 - - - - -	Ball Bearing ND 45306X1A
27 - - - - -	Bevel Pinion Bearing Spacing Washer
28 - - - - -	Bevel Pinion Shaft Collar
29 - - - - -	Bevel Pinion
30 - - - - -	Ball Bearing ND 7507X1A
31 - - - - -	Bevel Pinion Shaft Oil Seal Cap Gasket
32 - - - - -	Bevel Pinion Shaft Oil Seal Cap
33 - - - - -	Bevel Pinion Shaft Oil Seal
34 - - - - -	Oil Slinger
35 - - - - -	Bottom Cover Gasket



 REED
Thread Rolling Tools

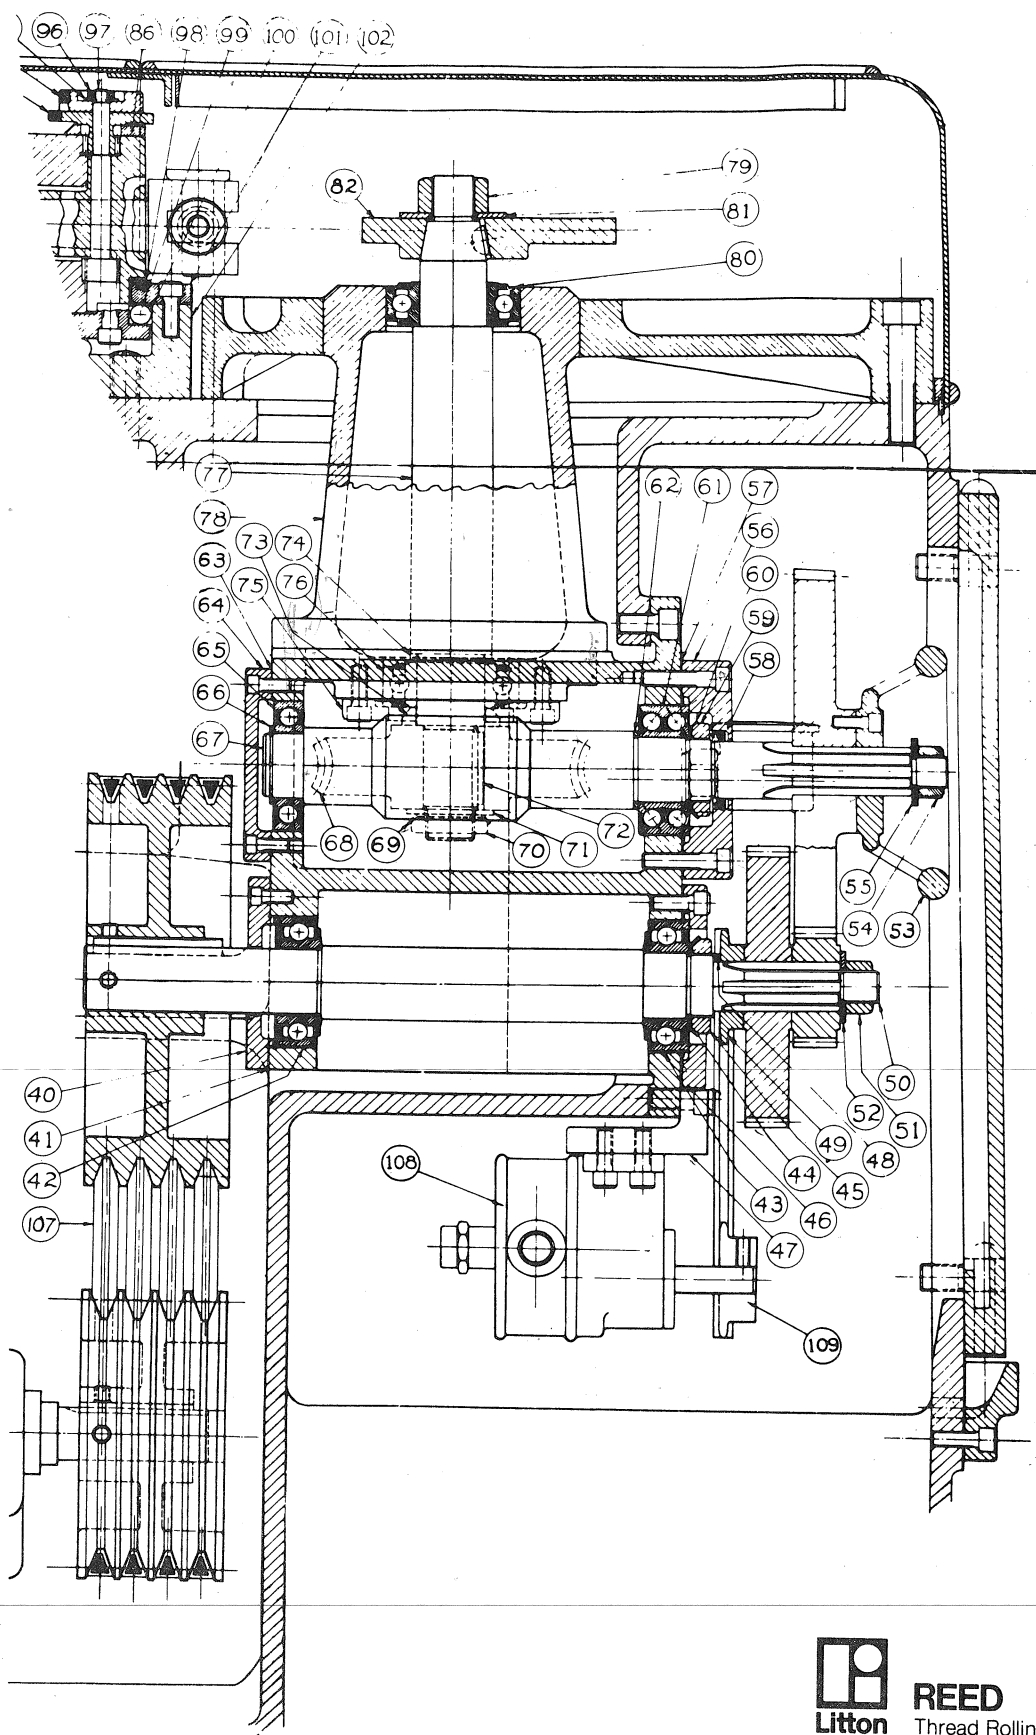

REED
Thread Rolling Tools

No. A22 MACHINE ASSEMBLY

IMPORTANT: Always furnish serial number of machine

<u>Symbol</u> <u>No.</u>	<u>Name of Part</u>
36 - - - - -	Bottom Cover
37 - - - - -	Key
38 - - - - -	Coupling
39 - - - - -	Die Drive Shaft With Key
40 - - - - -	End Cap
41 - - - - -	Gasket
42 - - - - -	Ball Bearing NDWC 88508X1C
43 - - - - -	Ball Bearing NDWC 488508X1C
44 - - - - -	Lock Washer NDW 08
45 - - - - -	Lock Nut NDN 08
46 - - - - -	Ball Bearing Cap
47 - - - - -	Pump Bracket
48 - - - - -	Sprocket Spacer
49 - - - - -	Sprocket (Driver)
50 - - - - -	Main Drive Shaft
51 - - - - -	3/4-16 Standard Hex Nut
52 - - - - -	3/4 x 1-1/2 x 3/32 Standard Washer
53 - - - - -	Hand Wheel
54 - - - - -	3/4-16 Standard Hex Nut
55 - - - - -	3/4 x 1-1/2 x 3/32 Standard Washer
56 - - - - -	Worm Shaft Ball Bearing Cap
57 - - - - -	Worm Shaft Ball Bearing Cap Gasket
58 - - - - -	Oil Seal
59 - - - - -	Lock Nut NDN 08
60 - - - - -	Lock Washer NDW 08
61 - - - - -	Ball Bearing ND 45508X1A
62 - - - - -	Worm Shaft Spacer
63 - - - - -	Worm Shaft End Cap Gasket
64 - - - - -	Worm Shaft End Cap
65 - - - - -	Ball Bearing ND 7208X1A
66 - - - - -	Cam Worm Shaft Snap Ring
67 - - - - -	Worm Shaft
68 - - - - -	Worm Gear
69 - - - - -	Lock Washer NDW 06
70 - - - - -	Lock Nut NDN 06
71 - - - - -	Bottom Cam Shaft Washer
72 - - - - -	Key
73 - - - - -	Worm Gear Spacer
74 - - - - -	Cam Shaft Spacer
75 - - - - -	Cam Shaft Housing Bearing Cap



REED
Thread Rolling Tools

No. A22 MACHINE ASSEMBLY

IMPORTANT: Always furnish serial number of machine.

<u>Symbol</u> <u>No.</u>	<u>Name of Part</u>
76 - - - - -	Ball Bearing NDWC 488508X1C
77 - - - - -	Cam Shaft
78 - - - - -	Cam Shaft Housing
79 - - - - -	1" - 14 Standard Hex Nut
80 - - - - -	Ball Bearing NDWC 88508X1C
81 - - - - -	Washer
82 - - - - -	Cam
83 - - - - -	Alemite Fitting No. 1633
84 - - - - -	1/2-13 Standard Hex Nut
85 - - - - -	1/2 x 1-1/16 x 5/64 Finished Beveled Washer
86 - - - - -	Top Clamping Ring
87 - - - - -	Oscillating Ring
88 - - - - -	Bottom Clamping Ring
89 - - - - -	Top Scroll Ring
90 - - - - -	Bottom Scroll Ring
91 - - - - -	Bottom Grease Seal
92 - - - - -	1/2 Diameter Steel Ball
93 - - - - -	Top Scroll Ring Adjustable Pinion
94 - - - - -	Scroll Adjustable Knob
95 - - - - -	5/16 x 3/4 x 1/16 Finished Beveled Washer
96 - - - - -	5/16 - 24 Hex Jam Nut
97 - - - - -	Bottom Scroll Ring Adjustable Pinion
98 - - - - -	Top Grease Seal
99 - - - - -	1/2" Diameter Steel Ball
100 - - - - -	9/16" Diameter Steel Rollers
101 - - - - -	Bearing Retaining Ring
102 - - - - -	Ball Race and Anchor Post Bracket
103 - - - - -	1" - 14 Standard Hex Nut
104 - - - - -	1-1/16 x 2-1/2 x 11/64 Standard Washer
105 - - - - -	Anchor Post
106 - - - - -	Main Housing
107 - - - - -	Drive Belt Set
108 - - - - -	Oil Pump
109 - - - - -	Sprocket (Driven)
110 - - - - -	Chain

CAM LEVER ASSEMBLY

IMPORTANT: Always furnish serial number of machine.

<u>Symbol</u> <u>No.</u>							<u>Name of Part</u>
111	-	-	-	-	-	-	Link Anchor Bolt
112	-	-	-	-	-	-	Link Anchor Bolt Nut
113	-	-	-	-	-	-	Link Anchor Bolt Washer
114	-	-	-	-	-	-	Link Anchor Bolt Roller Bearings
115	-	-	-	-	-	-	Link Anchor Pin
116	-	-	-	-	-	-	Link Anchor Pin Alemite Fitting
117	-	-	-	-	-	-	Adjusting Link Screw
118	-	-	-	-	-	-	Adjusting Link Thimble
119	-	-	-	-	-	-	Adjusting Link Nut
120	-	-	-	-	-	-	Adjusting Link Swivel Stud
121	-	-	-	-	-	-	Swivel Stud Nut
122	-	-	-	-	-	-	Swivel Stud Washer
123	-	-	-	-	-	-	Bottom Cam Lever
124	-	-	-	-	-	-	Top Cam Lever
125	-	-	-	-	-	-	Cam Lever Link Roller Bearing
126	-	-	-	-	-	-	Cam Lever Alemite Fitting
127	-	-	-	-	-	-	Cam Roller
128	-	-	-	-	-	-	Cam Roller Pin
129	-	-	-	-	-	-	Cam Roller Pin Alemite Fitting
130	-	-	-	-	-	-	Cam Lever Post
131	-	-	-	-	-	-	Cam Lever Post Nut
132	-	-	-	-	-	-	Cam Lever Post Bottom Washer
133	-	-	-	-	-	-	Cam Lever Spacer
134	-	-	-	-	-	-	Cam Lever Post Roller Bearing
135	-	-	-	-	-	-	Cam Lever Washer
136	-	-	-	-	-	-	Spring Case Swivel Pin
137	-	-	-	-	-	-	Spring Case Swivel Pin Nuts
138	-	-	-	-	-	-	Spring Case Swivel Pin Washers
139	-	-	-	-	-	-	Spring Case Swivel Block
140	-	-	-	-	-	-	Spring Case Swivel Block Roller Bearing
141	-	-	-	-	-	-	Spring Case Outer Sleeve
142	-	-	-	-	-	-	Inner Spring Case
*143A	-	-	-	-	-	-	Cam Lever Spring (Large)
*143B	-	-	-	-	-	-	Cam Lever Spring (Small - not shown)
144	-	-	-	-	-	-	Spring Case Stud
145	-	-	-	-	-	-	Spring Case Needle Bearings
146	-	-	-	-	-	-	Spring Case Stud Nut
147	-	-	-	-	-	-	Spring Case Stud Washer
148	-	-	-	-	-	-	Cam Lever Post Top Washer
149	-	-	-	-	-	-	Adjusting Link Set Screw

*Indicate if for A22 Machine with High Speed Oscillating Head.

 


REED
Thread Rolling Tools

CAM LEVER PARTS

For A22 or A23 REED Cylindrical Die
Thread Rolling Machines

IMPORTANT: When ordering parts, always furnish model and serial number of machine.

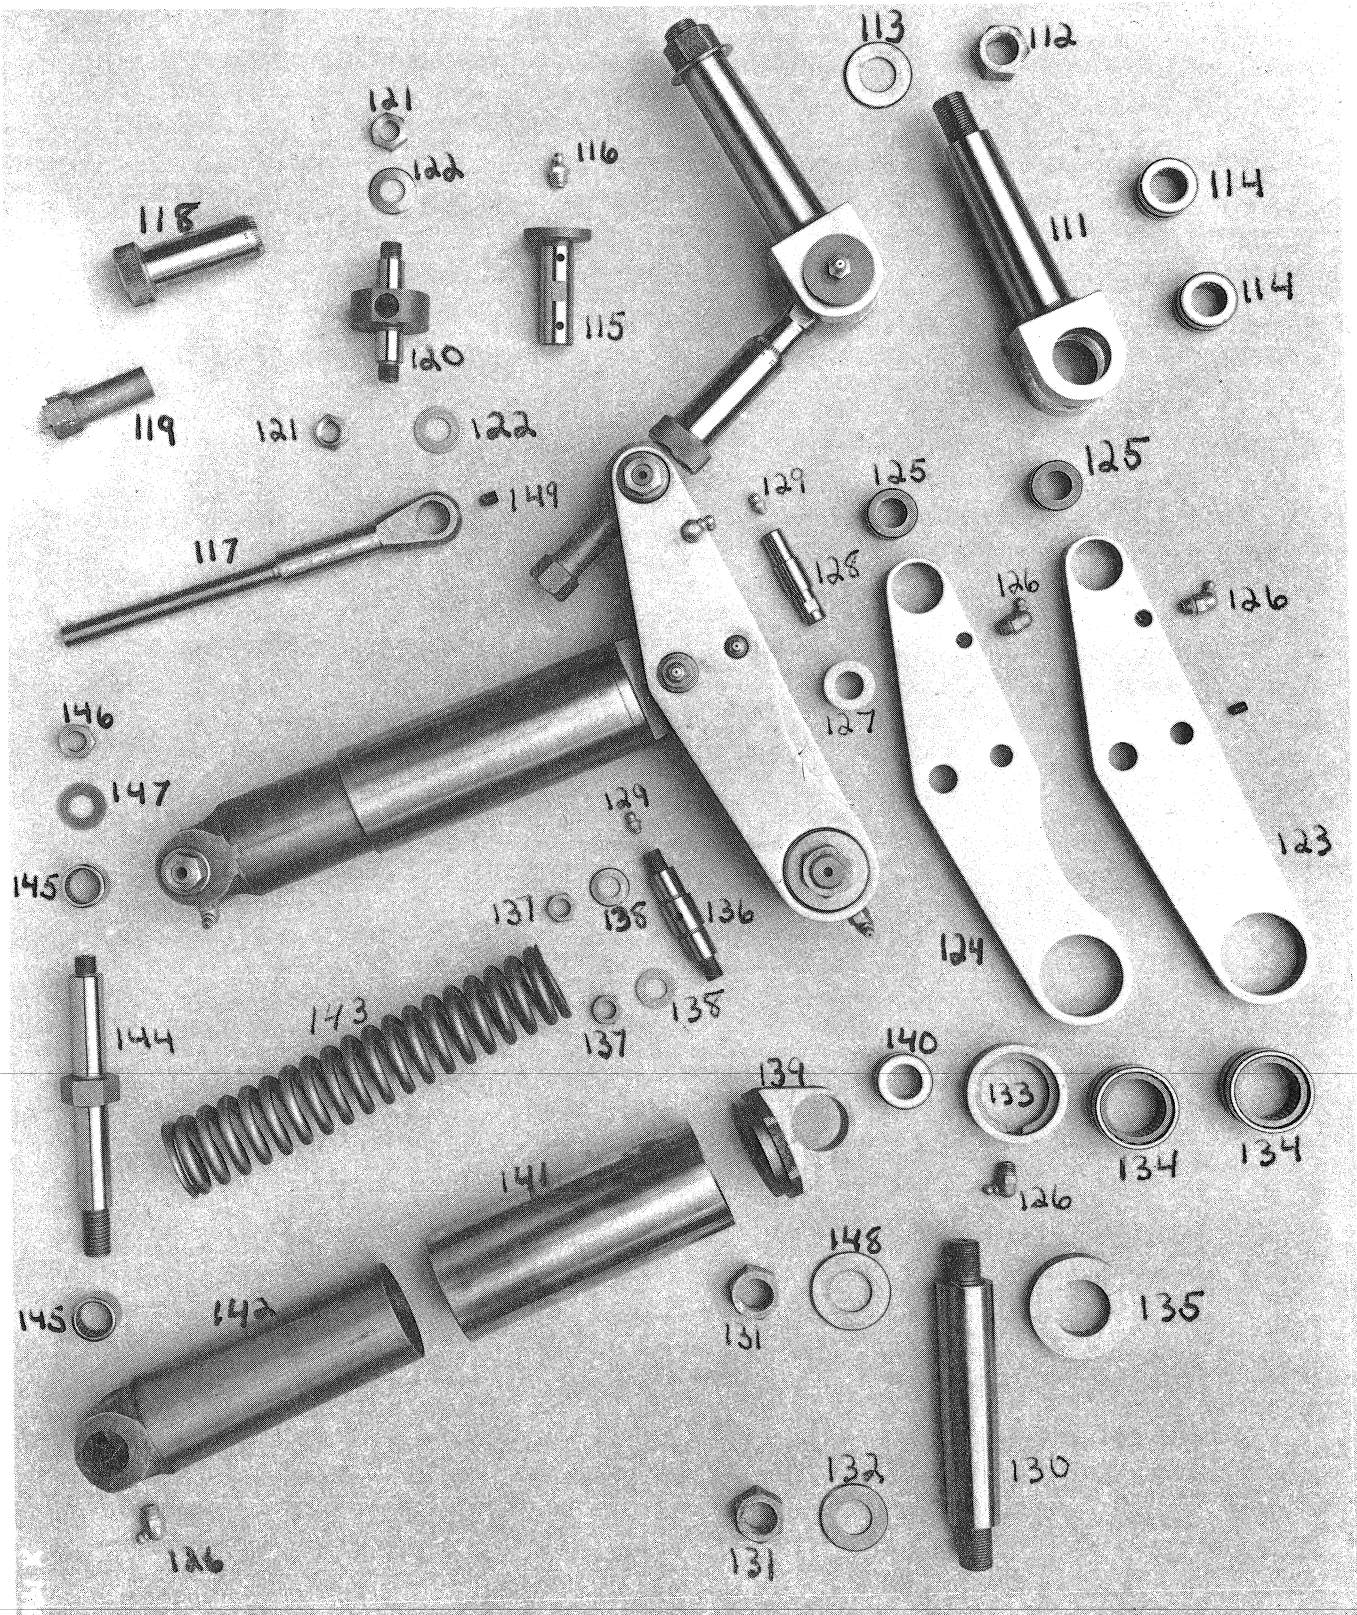

REED
Thread Rolling Tools

PIVOT BLOCK ASSEMBLY

UNIT NO. 10U

IMPORTANT: Always furnish serial number of machine.

Symbol
No.

Name of Part


150 - - - - -	Rockerless Pivot Block
151 - - - - -	Pivot Block Arm
152 - - - - -	Pivot Block Pin
153 - - - - -	Pivot Block Washer
154 - - - - -	Pivot Block Cap Screw



REED
Thread Rolling Tools

PIVOT BLOCK ASSEMBLY and PARTS
For A22, A22B or A23 REED Cylindrical Die
Thread Rolling Machines

IMPORTANT: When ordering parts, always furnish complete die holder number.

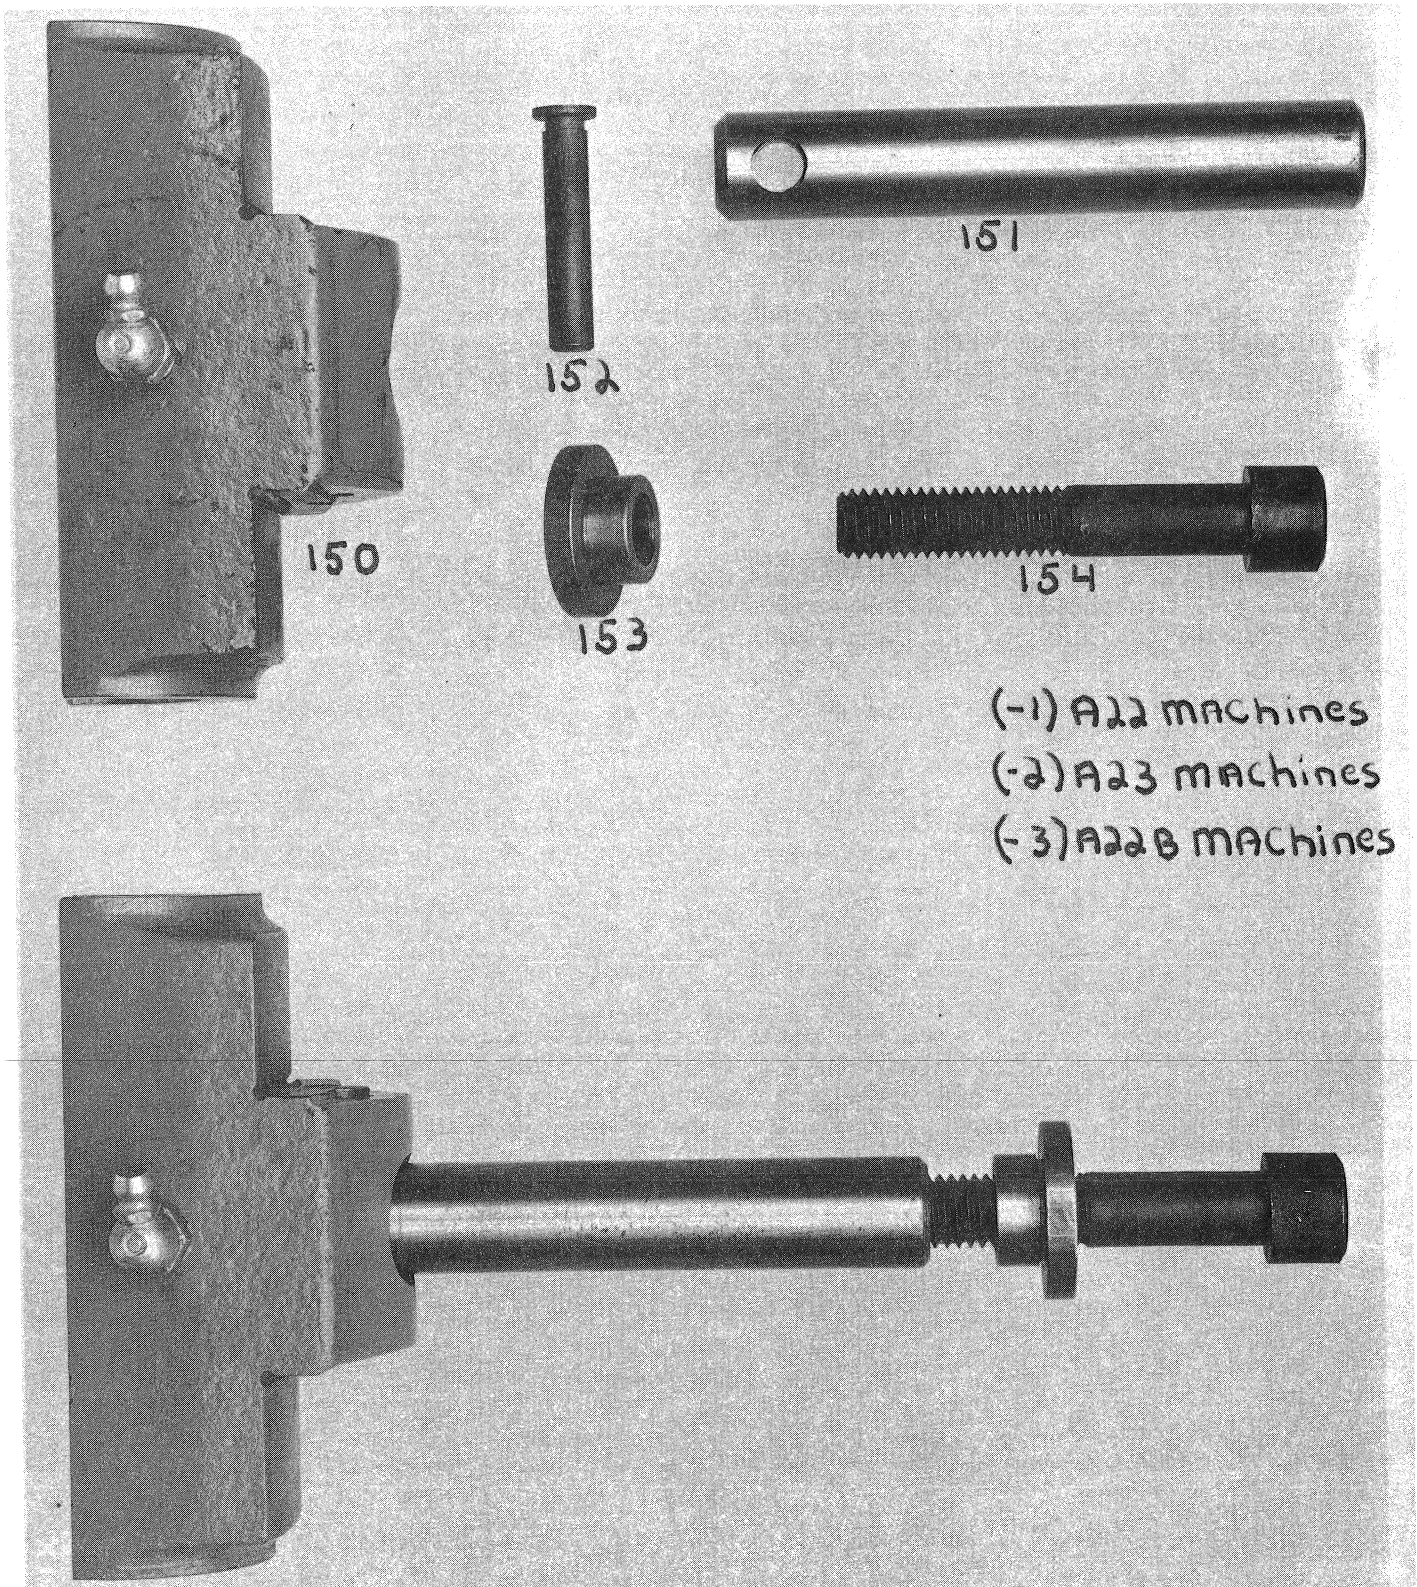

ADJUSTABLE WORK STOP ASSEMBLY

UNIT NO. 12U

IMPORTANT: Always furnish serial number of machine.

<u>Symbol No.</u>	<u>Name of Part</u>
155 - - - - -	Work Stop Base
156 - - - - -	Work Stop Adjusting Screw
157 - - - - -	Work Stop Adjusting Nut
158 - - - - -	Work Stop Spring

 


REED
Thread Rolling Tools

WORK STOP ASSEMBLY and PARTS

**For A22 or A23 REED Cylindrical Die
Thread Rolling Machines**

IMPORTANT: When ordering parts, always furnish model and serial number of machine.

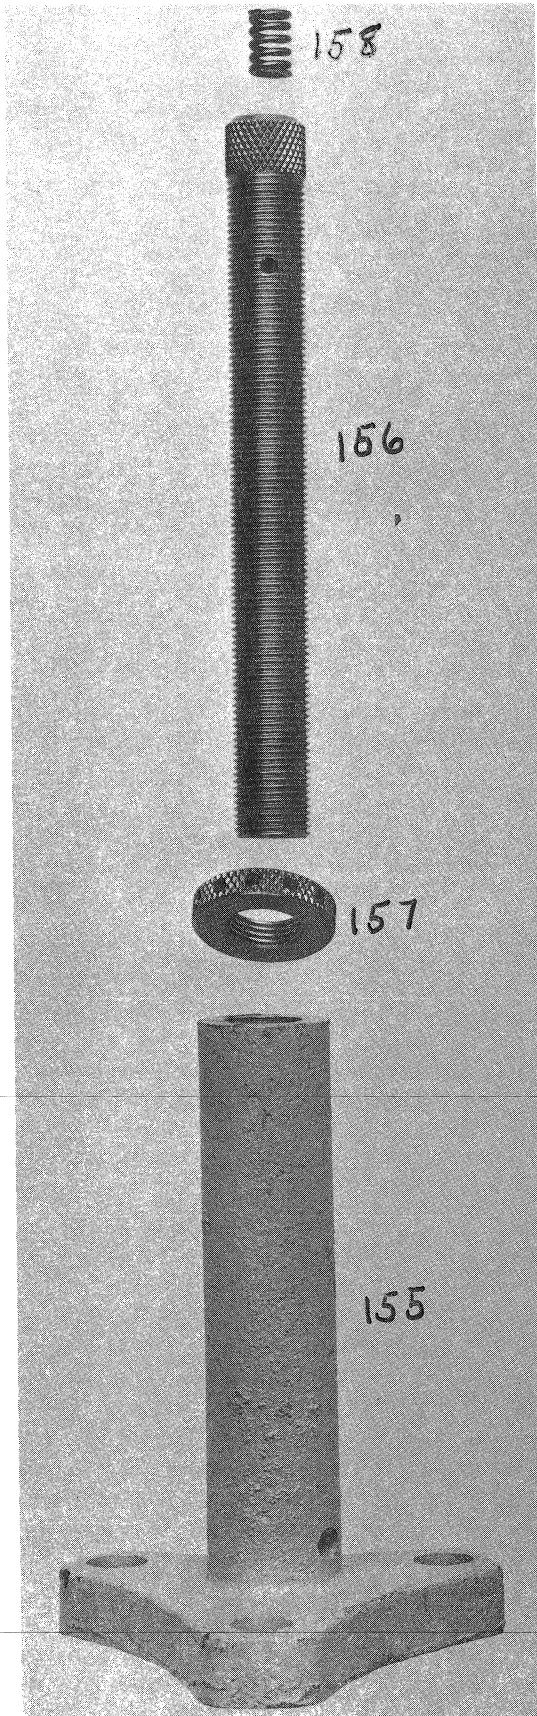

DOUBLE SUPPORT DIE HOLDER ASSEMBLY

IMPORTANT: Always furnish die holder number and serial number of machine.

Symbol

No.

Name of Part

159	- - - - -	Die Holder Body
160	- - - - -	Thread Rolling Die
161	- - - - -	Die Holder Lock Bolt
162	- - - - -	Die Holder Lock Bolt Key
163	- - - - -	Die Holder Bottom Lock
164	- - - - -	Die Holder Lock Bolt Nut
165	- - - - -	Die Holder Lock Bolt Latch
166	- - - - -	Die Holder Lock Bolt Latch Spring
167	- - - - -	Die Holder Link
168	- - - - -	Die Holder Spindle
169	- - - - -	Top and Bottom Steel Bushing
170	- - - - -	Top and Bottom Bronze Bushing
171	- - - - -	Thread Rolling Die Washer
172	- - - - -	Die Holder Spindle Universal Fork
173	- - - - -	Die Holder Spindle Pin
174	- - - - -	Die Holder Spindle Pin Retainer
175	- - - - -	Solid Universal Joint Connector
176A-	- - - - -	Universal Joint Center Block (Top)
176B-	- - - - -	Universal Joint Center Block (Bottom)
* 177A-	- - - - -	Universal Joint Lock Ring (Top)
* 177B-	- - - - -	Universal Joint Lock Ring (Bottom)
178A-	- - - - -	Small Universal Joint Pin (Top)
178B-	- - - - -	Small Universal Joint Pin (Bottom)
179A-	- - - - -	Large Universal Joint Pin (Top)
179B-	- - - - -	Large Universal Joint Pin (Bottom)
180	- - - - -	Top Matching Gear
181	- - - - -	Matching Sleeve
182	- - - - -	Ring Matching Gear Stop Pin
183	- - - - -	Spindle Bushing Retaining Cap
184	- - - - -	Spindle Bushing Retaining Cap Screw
**	- - - - -	Ring Gear Number Slide (not shown)
**	- - - - -	Number slide Locknut (not shown)
**	- - - - -	Matching Gear Spring (not shown)

* Latest holders contain rivets


** On A23 Machines only.



REED
Thread Rolling Tools

DIE HOLDER PARTS LIST — Double Support
For 1B, 2B, 3B Holders

IMPORTANT: When ordering parts, always furnish complete die holder number.

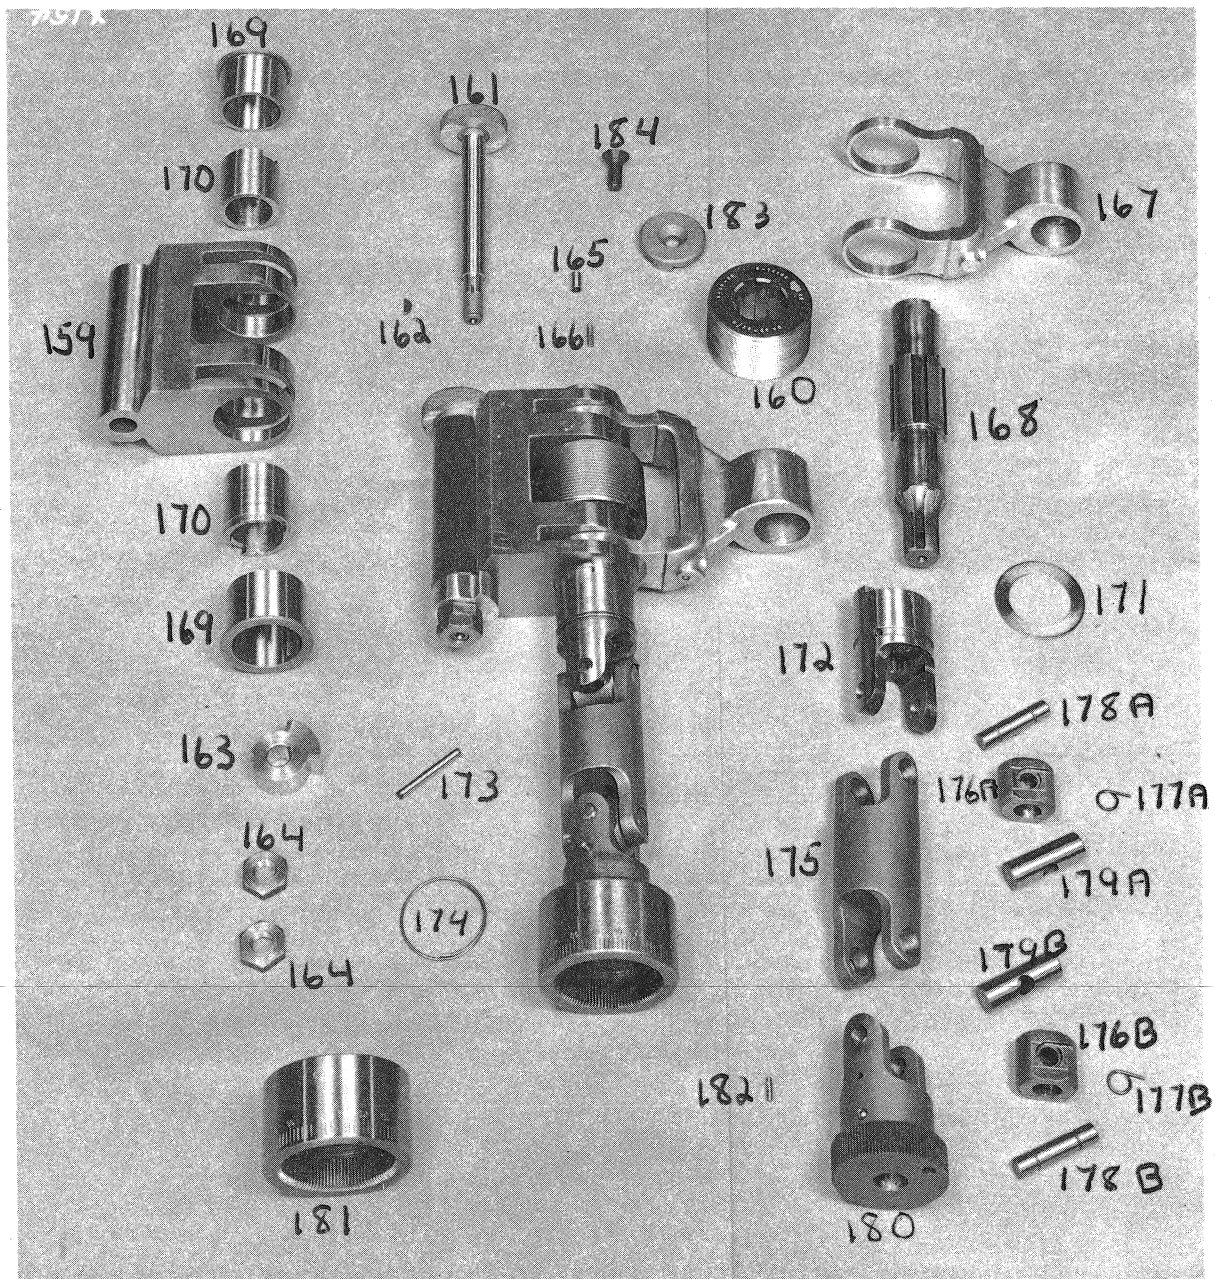

OVERHUNG DIE HOLDER ASSEMBLY

IMPORTANT: Always furnish die holder number and serial number of machine.

<u>Symbol</u> <u>No.</u>	<u>Name of Part</u>
185 - - - - -	Die Holder Body
186 - - - - -	Thread Rolling Die
187 - - - - -	Die Holder Lock Bolt
188 - - - - -	Die Holder Lock Bolt Key
189 - - - - -	Die Holder Bottom Lock
190 - - - - -	Die Holder Lock Bolt Nut
191 - - - - -	Die Holder Lock Bolt Latch
192 - - - - -	Die Holder Lock Bolt Latch Spring
193 - - - - -	Die Holder Link
194 - - - - -	Die Holder Spindle
195 - - - - -	Die Holder Spindle Key
196 - - - - -	Die Holder Spindle Washer
197 - - - - -	Die Holder Spindle Spring
198 - - - - -	Top or Bottom Bronze Bushing
199 - - - - -	Solid Universal Joint Connector
200A- - - - -	Universal Joint Center Block (Top)
200B- - - - -	Universal Joint Center Block (Bottom)
* 201A- - - - -	Universal Joint Lock Ring (Top)
* 201B- - - - -	Universal Joint Lock Ring (Bottom)
202A- - - - -	Small Universal Joint Pin (Top)
202B- - - - -	Small Universal Joint Pin (Bottom)
203A- - - - -	Large Universal Joint Pin (Top)
203B- - - - -	Large Universal Joint Pin (Bottom)
204 - - - - -	Top Matching Gear
205 - - - - -	Matching Sleeve
206 - - - - -	Ring Matching Gear Stop Pin
207 - - - - -	Thread Rolling Die Retaining Ring
** - - - - -	Ring Gear Number Slide (not shown)
** - - - - -	Number Slide Locknut (not shown)
** - - - - -	Matching Gear Holding Spring (not shown)

* Latest holders contain rivets.

** On A23 Machines only.

 


REED
Thread Rolling Tools

DIE HOLDER PARTS LIST - Overhung

For 10C, 20C, 30C Holders

IMPORTANT: When ordering parts, always furnish complete die holder number.

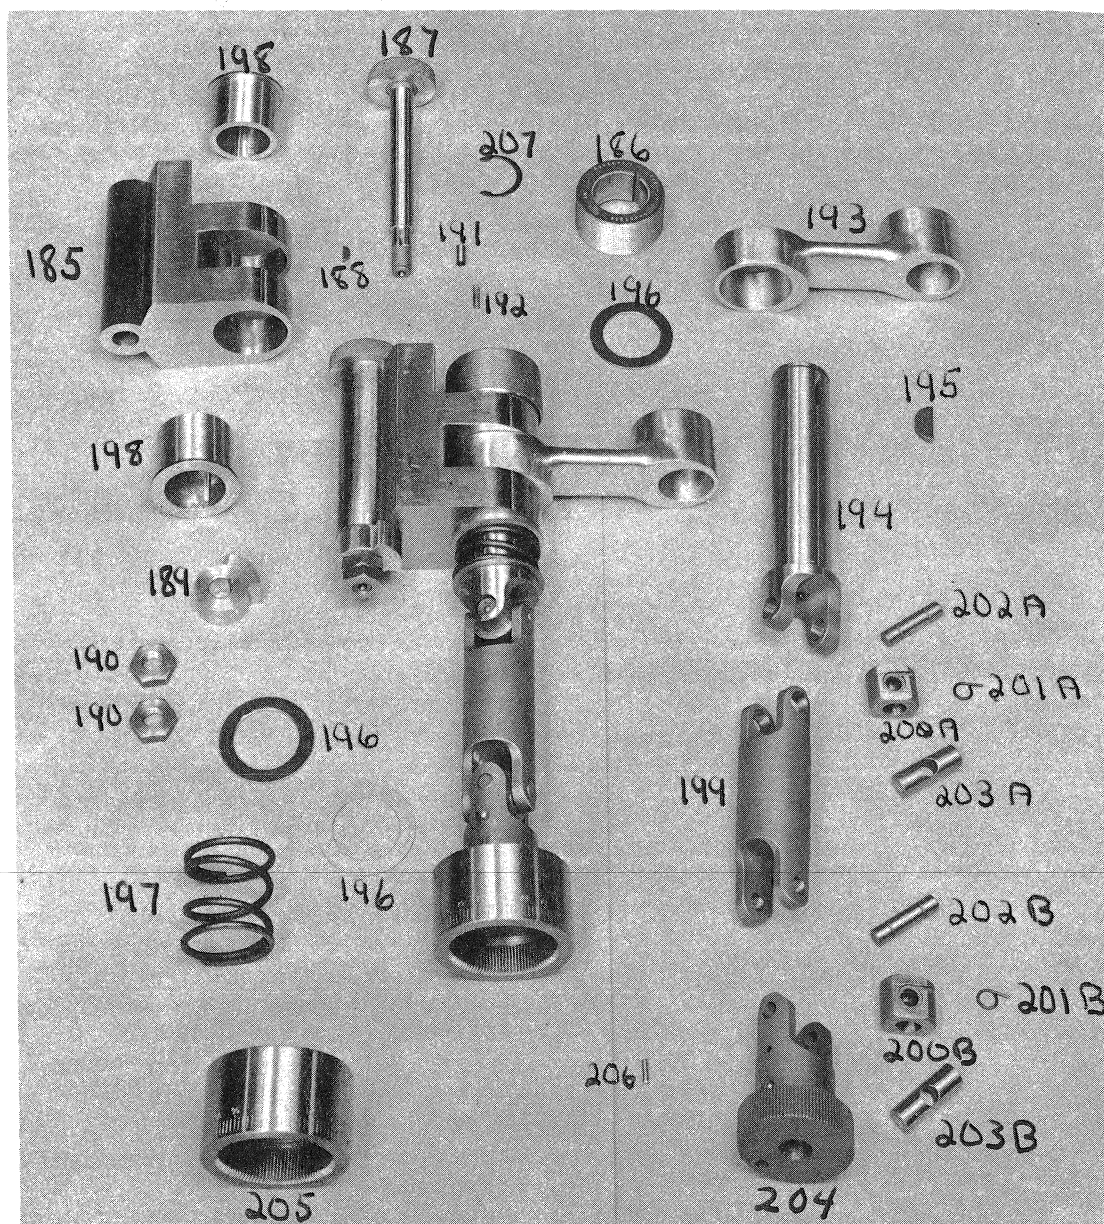

REED
Thread Rolling Tools